MS1 Chrome Upright Stand

10" Chrome Base Parts:

36" Chrome Upright, 7/8" Diameter

Decorative Chrome Piece

Wood Stand Adapter (If ordered with an Inflatable Full Size Male/Female Mannequin)

Note: If a part of this stand is missing or broken when received, please contact customer support via email at customerservice@advancedsalestech.com. Parts will be promptly replaced if we are notified within 10 days of receipt.

Using the Stand:

- Attach the 36" upright pole to the 10" round base with the decorative piece near the base. Tighten decorative piece until secure against the pole. Tighten pole until secure with the base.
- 2. Inflatable Torso Forms fit very snuggly when attaching them to the upright pole. Attach using a gentle twisting motion when placing the mannequin **on the stand.** Place torso form over pole and attach to one of the stand inserts at the base of the torso form (center position for dresses and tops, side position when using shorts or slacks).
- 3. **IMPORTANT:** When removing the torso form, place fingers over the stand insert on the torso form and pull up using a gentle twisting motion. Failure to do so may cause the stand inserts on the torso form to become loose or damaged.
- If an Inflatable Full Size Male or Female Mannequin was 4. ordered with the stand please use the provided wood stand adapter. Place the short end of the adapter into the top of the chrome upright and place the long end of the adapter into the pocket on the back of the mannequin.
- 5. The MS1 stand, although usable for other purposes, is designed for use with a wide variety of Inflatable Mannequin products such as: Inflatable Standard Torso Forms, Inflatable Large Torso Forms, Inflatable Child Forms, Inflatable Panty/Brief Forms, and is recommended for the use with Inflatable Male & Female Full size Forms.

Warning: Warranty and return claims are void if stand is damaged when used for purposes other than those for which it is designed.

Copyright 2004-2011 Advanced Sales Technologies, LLC